

biwin.co.uk

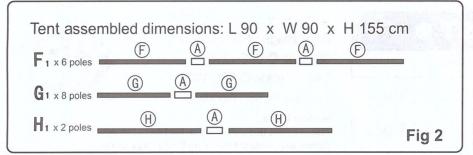

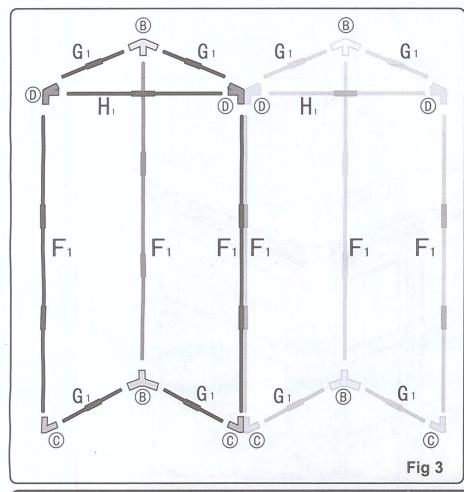

- 1. Take all the contents out of the box before start, identify all the parts & poles in its individual package is complete for used. Check as Fig 1.
- 2. Assembling F1 / G1 / H1 all with Connector (A). And F1 is consist of 3 xF1 and 2 (A). Total need to prepare 6pcs F1 for used, G1 and H1 also the same as F1 shown in Fig 2.
- 3. Lay open the tent, insert F1, G1 into the pole sleeves as show in Fig 3. Connector (B) (C) put it into right position as show. Attention Connector (D) shall be in correct way, H1 into top sleeve and covered with Velcro tape.
- **4**. Another side worked as step 3. finally adjust the shell with poles. This will build up the Tardis tent.

Here are a few suggestions to ensure that you get the maximum enjoyment:

Assembly The putting up & taking down of this product should always be done by an adult. It is recommended that two adults assemble this product, due to its size & weight.

Surfaces To ensure that you get the maximum use and enjoyment from the product – do not set it up on concrete or other jagged and hard surfaces as these may tear the material around the frame. It is advisable to set it up only on soft surfaces like carpet or grass.

Safety Advice

WARNING! This product contains small parts NEVER let small children assemble or pack this product for storage. **ATTENTION!** This product must only be used under adult supervision at all times.

WARNING! Keep away from fire.

NEVER allow a naked flame near this product – although it is made from fire retardant fabric, it will burn if left in continuous contact with a naked flame.

AFTER CARE: After assembly, check regularly to ensure all parts are secure and no damage has been sustained. If broken, discontinue use, as failure to do so may result in injury.

DO NOT leave outdoors in cold or wet weather. Store indoors in winter.

CLEAN ONLY with a damp cloth — other cleaning substances might render the flame-retardant coating ineffective. **NEVER** shelter in this toy during a thunderstorm. This is not waterproof or made for camping.

DO NOT continue to use this toy if any part of frame becomes bent or broken.

AGE: 3+